

5-LANGUAGE EUROPEAN TRANSLATOR

**ENGLISH • DEUTSCH • FRANÇAIS
ESPAÑOL • ITALIANO**

**User's Guide • Bedienungsanleitung
Mode d'emploi • Manual de usuario •
Guida dell'utente**

License Agreement

READ THIS LICENSE AGREEMENT BEFORE USING THE PRODUCT. YOUR USE OF THE PRODUCT DEEMS THAT YOU ACCEPT THE TERMS OF THIS LICENSE. IF YOU DO NOT AGREE WITH THESE TERMS, YOU MAY RETURN THIS PACKAGE WITH PURCHASE RECEIPT TO THE DEALER FROM WHICH YOU PURCHASED THE PRODUCT AND YOUR PURCHASE PRICE WILL BE REFUNDED. PRODUCT means the software product and documentation found in this package and FRANKLIN means Franklin Electronic Publishers, Inc.

LIMITED USE LICENSE

All rights in the PRODUCT remain the property of FRANKLIN. Through your purchase, FRANKLIN grants you a personal and nonexclusive licensed to use this PRODUCT. You may not make any copies of the PRODUCT or of the data stored therein, whether in electronic or print format. Such copying would be in violation of applicable copyright laws. Further, you may not modify, adapt, disassemble, decompile, translate, create derivative works of, or in any way reverse engineer the PRODUCT. You may not export or reexport, directly or indirectly, the PRODUCT without compliance with appropriate governmental regulations. The PRODUCT contains Franklin's confidential and proprietary information which you agree to take adequate steps to protect from unauthorized disclosure or use. This license is effective until terminated. This license terminates immediately without notice from FRANKLIN if you fail to comply with any provision of this license.

Key Guide

Language Keys

ENG

DEU

FRA

ESP

ITA

- At a source language screen, sets the source language to the selected key.
- Translates a word or phrase into the language of the key.
- Selects the language of the key as the message language.

Function Keys

BACK

Goes back a step (e.g., deletes typed letters).

CLEAR

Clears all operations and returns to the source language screen.



Goes to the Phrases, Calculator, Conversions, Games, Travel or Setup menus.

DATA

Goes to the Databank menu.

ENTER

Toggles between the source language and the most recent target language, selects a menu item, calculates math functions or toggles between name and phone number in the Databank.

ON/OFF





 
 
 
 
 
 
 



Turns the translator on and off.






 
Accesses the icon keys.

Key Guide

Calculator Keys

-  (+),  (-), Adds, subtracts, multiplies, or divides numbers.
-  (x),  (\div)
-  ($\sqrt{}$) Calculates square roots.
-  (C) Clears the calculator.
-  (.) Types a decimal point.
-  (MC) Clears the calculator memory.
-  (MR) Retrieves total from the memory.
-  (M -) Subtracts a number from the memory.
-  (M +) Adds a number to the memory.
-  (0-9) Types numbers.
-  (%) Calculates percentages.
-  (+/-) Changes the sign (+/-) of a number.

Direction Keys

-  Scrolls right or types a space.
-  Scrolls left or deletes typed letters.
-  Scrolls up or accents typed letters.
-  Scrolls down or accents typed letters.

Getting Started

To Set the Message Language

The first time you use this translator, you must set the message language. The message language is the language of screen instructions and menu items.

1. Press **ON/OFF**.
2. Press one of the language keys (**ENG**, **DEU**, **FRA**, **ESP**, or **ITA**) to select the message language.

To Change the Message Language

1. Press **☆**, then press **H/X** to access the Setup menu.
2. Press **ENTER** to select *Message Language*.
3. Press a language key to change the message language.

To View the Demo





When you first use this product, you will see a demonstration of what it can do.

1. Press **ON/OFF**.
The demonstration automatically appears.
2. To stop the demonstration, press **CLEAR**.



 
To Disable or Re-enable the Demo

You probably do not want to view the demonstration every time you use this product. Here is how to disable and re-enable the demonstration:

Getting Started

1. Press  then press  to access the Setup menu.
2. Use  to select *Disable Demo*.
3. Press .
4. To re-enable the demonstration, repeat the above steps. *Enable Demo* will appear as the selection in Step 2 above.

To Adjust the Screen Contrast

1. Press  to return to the source language screen.
2. Use  or  to darken or lighten the screen contrast.

Note: You can adjust the screen contrast only when you are at the source language screen.

✓ Auto-Shutoff

If you forget to turn this translator off, it will shut off in two minutes. When you turn on your translator again, operation resumes with your current settings.

✓ About Screen Illustrations

Some screen illustrations in this User's Guide may differ from what you see on the screen. The examples in the English section of this User's Guide use English as the message language.

Translating Words

You can use this translator to translate a word from a source language into a target language. You can change the source language at a source language screen by pressing the desired language key.

1. **Press** .
2. **To change the source language, press a language key.**
3. **Type a word or a word in a phrase you want to look up.**

cat_

To type a space, press ⇨.

To erase a letter, press or ⇧.

4. **Press a language key to select a target language.**

Or press to translate the word into the most recently selected target language.

5. **If needed, use ⇩ or ⇩ to select a desired form or phrase and press** .

To see a word or phrase that does not fit on the screen, press ⇨ repeatedly.

6. **Press** **to toggle between the source language and the target language.**

Or press to go back to the previous screen.

Translating Words

7. To translate the word into another target language, press one of the language keys.
8. Press **CLEAR** when finished.

✓ **Correcting Misspellings**

If you misspell a word in any language, or if you enter a word that is not contained in this translator, a list of corrections appears. Use ↓ or ↑ to scroll to a correctly spelled word and press **ENTER**.

✓ **Follow the Arrows**

The flashing arrows on the right of the screen show which arrow keys you can press to move around the screen.

✓ **Typing Special Characters**








You can type accent marks, diacritical marks, non-English letters, and capital letters, but they are not needed to find matches.

Special characters can be typed by first typing the desired letter and then repeatedly pressing ↑ or ↓ until the desired character is displayed.


To type a punctuation mark, press ⇨, then press ↑ or ↓ repeatedly until the desired character is displayed.


Translating Phrases

NOTE: The phrases in this product will be listed in the current source language.

1. Press , then press .
2. Use  or  to scroll to a category.
For example, choose *Doing business*.
3. Press .
4. Use  or  to scroll to a phrase or start typing it.










To see a phrase that does not fit on the screen, press  repeatedly.



 
5. Press a language key to translate the phrase.
To see another translation, press another language key.
6. Press  when finished.


Finding Telephone Numbers



You can find telephone numbers for airlines, airports and embassies around the world.

1. Press , then press  to access the Travel menu.
2. Use  or  until *Airlines, Airports or Embassies* appears and press .
3. Start typing the airline or airport name or the country for the embassy you want or press  or  repeatedly until it appears on the screen.

You can also type the abbreviation for the airline or airport.

4. Press .
5. If you selected an airline in Step 4 above, type the name of the city or country. If you selected an embassy, type the name of the city or country. You can also press  or  to scroll to your selection in either category.

If needed, press  to view the country telephone code in parentheses.

6. Press  to view the phone number.
7. Press  when finished.

Storing Names & Phone Numbers

This product has a data bank that can save approximately 100 names and phone numbers. The total amount of names and numbers that you can save depends upon the number of characters in each entry.

To Add an Entry to the Phone List

1. Press **DATA**.
2. Use **↓** or **↑** to see *Add a new entry* and then press **ENTER**.
3. Type a name and then press **ENTER**.

Each name can contain up to 23 characters (with letters appearing as capitals only) and spaces.

To delete a character, press **BACK** or **←**. To type a space, press **⇐**.

4. Use the numbered keys to type a phone number and then press **ENTER**.






To type a hyphen between parts of a phone number, press **⇐**, then press **↑** repeatedly until the hyphen appears.

You cannot type letters in the phone number.






✓ Checking the Memory

To see how much memory is free in the phone list to add more names and numbers, press **DATA** and then use **↓** to see *% Free: XX%*.


To View the Phone List

1. Press **DATA**.
2. Use  or  to highlight *View phone list* and then press **ENTER**.
3. To view a name, type it or use .
To delete a letter, press **BACK**.
4. Press **ENTER** to see the phone number.
5. To view another name and number, use  or , or type a name, and then press **ENTER**.

To Edit Phone List Entries


 
1. Press **DATA**.
2. Use  or  to highlight *Edit entry*, then press **ENTER**.
3. Type the name you want to edit or use  or  to select it, then press **ENTER**.
Follow the screen instructions. Use **BACK** or  to delete characters. Type your changes and then press **ENTER** until the entry is saved. Or press **DATA** to cancel the edit.
4. Use **BACK** to go back to the phone list options.

To Delete an Entry from the Phone List

1. Press **DATA**.
2. Press **ENTER** to select *Delete entry*.
3. Press  until you see the entry that you want to delete.
4. Press **ENTER**.
5. Press **Y** to erase the entry or **N** to cancel the operation.

To Erase All the Phone List Entries

Warning! This procedure permanently erases all the names and numbers in your phone list.

1. Press **DATA**.
2. Use  or  to see *Erase all data* and then press **ENTER**.
3. Press **Y** to erase all the entries or **N** to cancel the operation.


✓ Keep Copies of Important Data

Warning! Your phone list information is safely stored in memory as long as the battery supplies power. However, if the battery loses all power, this information will be permanently lost. You should always keep written copies of your important information.

Using a Password



 







You can use a password to keep the information in your phone list private. Your password will be requested whenever anyone turns on the unit and presses **DATA**.

Warning! After you have set the password, it will be required whenever you try to access the phone list for the first time during a session. So always record your password and keep it in a separate place.






1. Press **DATA**.
2. Use  to see *Set the password* and then press **ENTER**.
3. Type a password and then press **ENTER**.
You will be asked to confirm it. Type the password exactly as you typed it the first time and press **ENTER**. Remember to write down your exact password and keep it in a separate place.
4. To test the password, press **ON/OFF** twice, press **DATA**, type the password, and then press **ENTER**.
5. To disable the password, repeat Steps 1 and 2 above, and then press **ENTER** when *ENTER Password* appears.

Using the Calculator

To Use the Calculator


 






1. Press , then press .
2. Use the numbered keys to type a number.
To type a decimal point press . NOTE: in this product, a (•) is used as a decimal indicator.
3. Press  (+),  (−),  (x), or  (÷) to add, subtract, multiply, or divide.
4. Type another number.
5. Press  (=) to calculate the equation.
Or press  (%) to calculate the percentage.
6. To clear the calculator, press  (C).

To Use the Calculator Memory





1. Perform a calculation as shown above, or simply type a number in the calculator.
2. Press  (M +) to add the number to the calculator memory as a positive number or  (M −) to add it to the memory as a negative number.
The total in the memory flashes on screen.
3. Press  (C) to clear the calculator, or continue performing a calculation.
4. To retrieve the figure from the memory, press  (MR).
5. To clear the entire calculator memory, press  (MC).

Converting Measures & Currencies

You can convert temperatures, weights, liquid measures, and lengths to and from imperial and metric measurements. You can also convert currencies using an exchange rate that you enter.

1. Press , then press .
2. Use  to select a conversion category then press .
3. Use  repeatedly to scroll to the conversions (i.e., $^{\circ}\text{C} \rightarrow ^{\circ}\text{F}$) and then press .
4. Follow the screen directions to convert and press .
5. To make another conversion, press .

✓ Converting Money








The first time you select the money converter, you will be asked to set the exchange rate equal to one unit of the home currency. Type an exchange rate and press . Next, press  or  to select a conversion (e.g., *Home* \rightarrow *other*). Press , then enter the amount to be converted.

To change the conversion rate, select *Money* from the *Conversions* menu, select *Set Rate*, and type a new exchange rate.

Playing the Games






To Play Hangman

Hangman selects a mystery word and lets you try to guess it letter by letter.

1. Press , then press .
2. Press  or  until *Hangman* appears and press .
3. To change the language of the mystery word, press one of the language keys.
4. Type your guesses.
The ?'s represent letters of the mystery word.
The numbers show how many guesses remain.
5. To show the word and end the round, press .
6. Press  again to play a new round.

To Play Quiz

Quiz tests your translation skills. Note: To change the language for Quiz, you must change the source language before you play. See "Translating Words" for more information.

1. Press , then press .
2. Press  until *Quiz* appears and press .
- Say the word and try to guess its translation.
3. Press a language key to see its translation.
4. Press  again to start a new round.

Product Care

Specifications

Model: 5-Language European Translator (TWE-106B)

 
- Battery: 1 CR2032, lithium
- Size: 6.9 x 10.1 x 0.8 cm
- Weight: 45.36 g

Replacing the Battery

This product uses one CR2032, 3-volt lithium battery. Should you need to replace the battery, unscrew the screws on the back with a very fine screwdriver and carefully remove the back cover. Then install a new battery, plus sign (+) facing you, and replace the cover.

Cleaning, Storage, Problems

To clean, spray a mild glass cleaner onto a cloth and wipe its surface. Do not spray liquids directly on this product. Do not use or store this product in extreme or prolonged heat, cold, humidity, or other adverse conditions. If you have a problem with this product, refer to the warranty.

This unit may change operating modes due to Electro-static Discharge. Normal operation of this unit can be re-established by pressing , or by removing/replacing batteries.

Copyrights, Patents, and Trademarks

© 2000 Franklin Electronic Publishers, Inc.
Burlington, N.J. 08016-4907 USA. All rights reserved.
U.S. PATENTS; 4,490,811; 4,830,618; 4,891,775; 5,113,340;
5,203,705; 5,218,536; 5,295,070; 5,396,606.
EURO. PAT. 0 136 379. Patents Pending.
ISBN 1-56712-531-x

FCC Notice

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: This unit was tested with shielded cables on the peripheral devices. Shielded cables must be used with the unit to insure compliance.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

Limited Warranty (outside U.S.)

This product, excluding batteries, is guaranteed by Franklin for a period of one year from the date of purchase. It will be repaired or replaced with an equivalent product (at Franklin's option) free of charge for any defect due to faulty workmanship or materials.

Products purchased outside the United States that are returned under warranty should be returned to the original vendor with proof of purchase and description of fault. Charges will be made for all repairs unless valid proof of purchase is provided.

This warranty explicitly excludes defects due to misuse, accidental damage, or wear and tear. This guarantee does not affect the consumer's statutory rights.

| Technical Support/Ayuda técnica /Technische Hilfe/Aiuto tecnico/Aide technique/Technische Steun | |
|--|--|
| Deutschland Österreich | Bitte schicken Sie dieses Produkt im Garantiefall mit Kaufbeleg an folgende Service-Adresse: Franklin Electronic Publishers (Deutschland) GmbH, Kapellenstrasse 13, D-85622 Feldkirchen. Den technischen Support erreichen Sie unter Tel. +49-89-90899-116. Bestellinformationen erhalten Sie unter Tel. +49-89-908990 oder im Internet unter www.franklin-net.de |
| Mexico | Para Soporte Técnico llamar al tel. 01 800 710 5938 |
| USA & Canada | Technical Support is open from 9AM to 5PM EST Monday through Friday. Please call (609) 386-8997 and choose option 3, or fax (609) 387-1787 or visit us at www.franklin.com |
| All other countries Todos los otros países Alle anderen Länder Altri paesi Tous les autres pays Alle Overige Landen Todos os outros países Για όλες τις άλλες χώρες | www.franklin.com |